

Check List for Sensear Tablet
Turn off Headset

Power Tablet On:

- Connect tablet to headset and the app will auto launch
- Not required to be connected to WIFI to program headsets

Device:

- Firmware Types
 - Bootloader – not applicable
 - Main Application – Shows current and past firmware versions
 - Audio Image – Contains all sounds played by the headset (tones, beeps etc)
 - Configuration Profile – allows for selection of different headset profiles headset operation
- Firmware Programming
 - Allows for upgrading the headsets firmware. (Need to be connected to WIFI for firmware upgrades)
 - Red Indicates upgrade available. Green indicates most recent firmware
 - Download latest firmware to the tablet
 - Upload firmware from tablet to headset

Settings:

- Allows for customization of headset
- SENS Mode:
 - On at Start-Up
 - Enable
 - Disable
 - On During Transmit (TX) (hear SENS audio when Transmitting or in bluetooth mode)
 - Sidetone – Sets mic audio to be played in your ear during transmit
- Volume Limiter
 - Set to 82db by default
 - Occupational Safety and Health Administration (OSHA) 85db time weighted over 8 hrs
 - 90db max
- Bluetooth
 - Enable
 - Disable
 - Level Adjustment
 - RX-Cut or boost the headsets incoming receive audio level
 - TX-Cut or boost the headsets outgoing transmit audio level
- Two-Way wired two- way radios
 - Level Adjustment
 - RX-Cut or boost the headsets incoming receive audio level
 - TX-Cut or boost the headsets outgoing transmit audio level
- FM Radio
 - Enable/Disable
 - Allows ability to listen to FR radio broadcast. Not compatible with Short Range
- Short-Range
 - Enable/Disable
 - Channels/Frequency
 - Up to 8 preprogrammed channels available when enabled, configurable via set-up mode
 - Region
 - 1: highest power
 - 2: should generally be used in EU region
 - 3: should generally be used in the Americas. (Note, region 3 limits the highest frequency to 97.0MHz)
 - Transmit mode
 - Normal – Headset will transmit normally when Push to talk button is pressed and stop transmitting when the push to talk button is released
 - Latching Transmit – Headset will transmit when the Push to Talk button is pressed and continue to transmit until the push to talk button is pressed again
 - Transmit Only – Headset is constantly in transmit mode when powered on. It will not receive in this mode. (designed for teacher mode)
 - VOX (Voice operated transmit)
 - Allows for hands free transmit via voice detect transmit function
 - Trigger Level – Adjusts transmit detect sensitivity, Low (most sensitive), Medium, High
 - Attack time – set timing of transmitter on
 - Release time – set timing of transmitter off
 - Lock out – allows for locking certain features so they cannot accidentally be disabled
- Button Assignment
 - Applicable when PTT button SRCK6170 is used with SM1P Smartmuff headset with download
 - Applicable for use with SmartPlug Full version in ear headset